

## CONTENTS(1/4)

Power Tool Group	No.	Application	Repair Tool		Code No.	For Model	Page
			Name	Type			
Electric Power Tools	1	Support of Special Repair Tools	Sleeve	J-130	970907	Various Models	1
				J-130-2	970908		
	2	Removal of Armature Ass'y	Plate	J-131	970909	Various Models	2
				J-131-2	970910		
	3	Ball Bearing Removal	Bearing Puller Ass'y	J-30	970804	Various Models	3
	4	Removal of Roll Pin	Roll Pin Remover	-	970854	Various Models	5
					970855		
					970856		
					970857		
	5	Mounting/Dismounting of Hex. Socket Head Bolts	Hexagon Bit	J-205	970984	Various Models	6
				J-206	970985		
				J-207	970986		
	6	Reassembly of Ball Bearing, Gears and other parts	Sleeve	J-41	970809	Various Models	7
				J-42	970810		
J-43				970811			
J-44				970812			
J-127				970895			
J-127-2				970896			
J-127-3				970897			
J-127-4				970898			
J-127-5				970899			
J-127-6				970900			
J-127-7	970901						
J-127-8	970902						
J-127-9	970903						
7	Stator Reassembly in Housing	Stator Press Pin	J-132	970911	Various Models	9	
			J-132-2	970912			
8	Inspection for Armature Ass'y Short-circuit	Growler	J-95	970843	for 100V - 127V	10	
				001063	for 200V - 240V		
9	Disassembly of Ball Bearing	Bearing Puller	J-231-1	306438	-	11	
			J-231-2	306439			
			J-231-3	306440			
Drills, Impact Drills	10	Disassembly of Spindle section	Special Repair Tool Set	J-136	970920	D10YA	12
	11	Disassembly/Reassembly of Ratchet(A)	Spanner Ass'y	J-94	970869	DV12/16, DVR10/13, VTP10/13/13A/16A, VTV10/13/16, etc.	13
	12	Disassembly/Reassembly of Dust Seal	Wrench	J-168	970950	D10VD, D13T, D13VB, DV14V/20T/20V2/20V3	15
	13	Removal of Drill Chuck	Chuck Puller	J-10	970800	for Drill Chuck of taper mount type	16
					970872		
					970801		
			Ring	J-78	970817	for Drill Chuck of screw mount type	17
					970818		
			Ring(B)	J-90	970832		
	970833						
	Ring(C)	J-98	970852				
			970853				
	Ring(D) Ass'y	J-118	970886				
	Ring(D)	J-118	970887				
970888							
14	Disassembly/Reassembly of Drill Chuck	Spindle Lock Jig	J-134	970914	D6D	18	
			J-148	970928	D10D, D10DH, D10DF, etc.	19	

## CONTENTS(2/4)

Power Tool Group	No.	Application	Repair Tool		Code No.	For Model	Page	
			Name	Type				
Drills, Impact Drills	14	Disassembly/Reassembly of Drill Chuck	Sleeve	J-106	970867	D10DB, DTC-10	20	
			12mm Wrench	-	936553	D10DC	21	
	15	Removal of Drill Chuck	Chuck Puller(A)	J-197	970978	D10VC	22	
			Chuck Puller(B)	J-198	970979			
			Special Wrench	-	873929			
			Wrench Ass'y	J-140	970921	D13Y		23
				J-162	970944	D13YA	24	
	16	Disassembling the Gear from the Spindle	Sleeve D34	J-245-1	307718	D13V	25	
			Sleeve D37	J-245-2	307719			
			Sleeve D42	J-245-3	307720			
	17	Assembly of Motor	Moor Positioning Jig(B)	J-265	308509	WH12D, WH12DB, WH8D, WH8DA, etc.	26	
Moor Positioning Jig(A)			J-252	308508				
18	Mounting and Removing of Keyless Chuck	Spindle Lock Jig Set	J-292	316379	DS12DVA, DS9DVA	28		
Disc Grinders, Disc Sanders	19	Ball Bearing Removal	Bearing Puller	J-166	970947	G13SC, G15SA, G18SE, G18SF, G23SC, G23SD	30	
			Hook (2 pcs.)	J-166	308771			
	20	Removal of Spiral Bevel Gear from Spindle	Gear Puller	J-128	970904	Old Models (above 150mm class)	32	
				J-129	970905	PDA100B, PDM100A, PDP-100C/115, G10, etc.		33
				J-129-2	970906	PDM115/125, PD125A		
				J-163	970945	G18SC/18SD/23SA/23SB		34
				J-164	970946	G18SE, G18SF		35
				J-165	970949	G12SA, G13SB		36
	21	Disassembly/Reassembly of Armature Ass'y	Armature Replacement Jig	J-96	970850	All Models	37	
			Sleeve	J-96	970864			
			Sleeve	J-96	970865			
Sleeve(C)			J-96	970866				
22	Removal of Needle Bearing	Needle Bearing Puller	J-216	970997	G18SC/18SD/18SE/18SF, G23SA/23SB/23SC/23SD	38		
23	Disassembly of the Wheel Nut of 100mm Grinder	Double Hole Socket	J-244	307662	G10SD1	39		
Hammers, Hammer Drills	24	Disassembly/Reassembly of Hex. Socket Head Bolts	Bar Wrench for M5	-	970915	PH40F/55A/65A, H45, PR25B/38E/50	40	
			Bar Wrench for M6	-	970916			
	25	Removal of Seal Lock Bolts and other difficult to loosen bolts	Hex. Socket	J-178	970962	All Models	41	
				J-179	970963			
			Extension Bar	J-180	970964			
			Driver Bit	J-189	970970			
				J-190	970971			
			Bit Holder	J-193	970972			
			Extension Bar	J-194	970973			
	Slide T-type Handle	J-196	970974					
	26	Disassembly/Reassembly of Front Cap	Front Cap Puller	J-103	970863	DH18V/20V/22V/25V/25Y	43	
			Wrench	J-100	970859	VR16, VRV16, VRT22/22A, etc.		
			Spacer(A)	J-214	970994	VR16, VRV16	44	
			Spacer(B)	J-215	970995	DH22/22V/25V/25Y		
Front Cap Puller(E)			J-199	970975	DH20V/22V/25V, VRV16	45		
27	Disassembly of Slip Clutch portion and Slip Torque Adjustment	Gear Spanner Ass'y	J-109	970874	DH18V	46		
		Third Gear Block Ass'y	J-110	970875	VR16, VRV16			
		Third Gear Block Ass'y	J-116	970882	DH38YA	47		
		Gear Spanner Ass'y	J-117	970883	VR38			
		Wrench	J-122	970884	VRY38			

## CONTENTS(3/4)

Power Tool Group	No.	Application	Repair Tool		Code No.	For Model	Page
			Name	Type			
Hammers, Hammer Drills	27	Disassembly of Slip Clutch portion and Slip Torque Adjustment	Gear Fastener	J-120	970889	DH22/22V/22VA/22Y, DH25V/25Y	48
			Torque Adjusting Wrench	J-121	970890		
			Wrench	J-122	970884	DH28Y	49
			Second Gear Block Ass'y	J-141	970923		
			Socket Ass'y	J-142	970924		
			Spacer	J-143	970925		
			Wrench	J-122	970884	DH50SA, DH50SA1	51
			Second Gear Block Ass'y	J-137	970917		
			Socket Ass'y	J-138	970918		
			Spacer	J-139	970919	DH50SA, DH50SA1	53
			Slip Test Jig	J-145	970926		
			Sleeve	J-186	970967	DH16V, DH20VB	54
			Slip Test Jig	J-220	970999	DH38YA/38YE/38YF, DH50SB	55
			Slip Test Jig	J-222	305673	DH28Y, DH38YB/YB1, etc.	56
			28	Removal of Retaining Ring	Snap Ring Pliers	J-200	970976
29	Removal of O-Ring	Spring Hook	J-201	970977	DH22VB, DH22VD	58	
30	Mounting/ Dismounting Hex. Socket Head Bolts of Retainer	Retainer Pin Puller Ass'y	J-210	970990	H41, DH38SA, DH35	59	
		Special Nut M5	J-211	970991			
		Holder	J-212	970992			
		Special Bolt M5	J-213	970993			
31	Reassembly of Stopper Lever	Stopper Lever Repairing tool	J-124	970891	PH55A	60	
32		Wrench	J-123	970885	DH38YA, VR38, VRY38	61	
			J-144	970922	DH28Y		
33	Disassembly/Reassembly of Oil Cap	Wrench Ass'y	-	936728	DH20V/22/22V/22VA/22Y/DH25V, 28Y/35, VR16, VRV16, etc.	62	
34	To Protect Oil Seal Damage	Protection Cap	J-171	970951	DH35	63	
35	Disassembly of Crank Shaft and Related Parts	Sleeve (B)	J-237	306979	H90SC, H90SA	64	
36	Disassembly and Reassembly of Stators	Bar	J-240	307552	H65SB, H90C	65	
		Leg (A)	J-241	307553			
		Guide Bar	J-242	307554			
		Press Bar (A)	J-243	307555			
37	Removal of Needle Bearing	Needle Bearing Puller (B)	J-249	308299	DH50SA, DH50SA1, DH50SB	67	
	Disassembly of Ball Bearing	Ball Bearing Puller	J-253	308491	DH38SA	68	
38	Assembly of Retaining Ring	Retaining Ring Press Jig Set	J-251	308300	DH15V, DH15D2, T1715A	69	
39	Removal of the Needle Bearing from the Crank Case	Needle Bearing Puller	J-225	305823	DH38YB1, DH38YB, etc.	70	
		Ball Bearing Puller	J-226	305824			
		Balance Weight Holder	J-227	305825			
40	Disassembly of the Front Cap	Wrench	J-228	305884	DH20V	73	
41	Assembly of Second Gear Portion	Second Gear Block Ass'y	J-271	313499	DH40MA, DH40SA, DH40YB	74	
		Socket Ass'y	J-272	313500			
Orbital Sanders	42	Reassembly of Spring	Hook	J-187	970968	SV12SD, SV12SE, SV12V	76
	43	Reassembly of Balance Weight section	Sleeve	J-188	970969	SV12SD, SV12SE, SV12V	77

## CONTENTS(4/4)

Power Tool Group	No.	Application	Repair Tool		Code No.	For Model	Page
			Name	Type			
Planers, Belt Sanders	44	Disassembly/Reassembly of Pulley	Wrench	J-113	970878	P20SA, P20V, P30, SB8T, SB75	78
	45	Disassembly of Pulley	Wrench	J-113	970878	SB110	79
Chain Saws	46	Disassembly/Reassembly of Chain	Rivet Spinner	J-87	970829	CS28B, CS35B, CS280A, CS350A	81
			Pocket Chain Breaker	J-88	970830		
	47	Sprocket Disassembly	Wrench	J-89	970831	CS28B/35B, CS280A/350A	85
Engine Powered Grass Cutters	48	Disassembly of Fly-Wheel Torque portion	Fly-Wheel Puller Ass'y	J-70	970814	KB33A/33B, KB33SL/54S	86
	49	Disassembly of Fly-Wheel and Crank Shaft	Fly-Wheel Puller Ass'y	J-82	970822	All Models	87
	50	Disassembly of Fly-Wheel	Fly-Wheel Puller Ass'y	J-104	970870	CG33E/33E1, KB33C, KBR33A	88
				J-119	970881	KB33A, KB33C	89
51	Mounting Spiral Spring in Recoil Starter	Spiral Spring Ass'y Tool	J-126	970892	CG26E/26EA/26EB, KB23, KBD23	90	
Pneumatic Nailers, etc.	52	Tightening/Loosening of Trigger Valve Bush	Valve Bush Spanner	J-125	970893	Many Models	91
	53	Removing of the E-type Stop Ring for the Magazine	E-type Stop Ring Remover	J-269	308906	NV65AA, etc.	92
Saber Saw	54	Ball Bearing Removal	Puller Attachment	J-173	970954	CR12, CR12V	93
Magnet Drill Press	55	Spanner for Attaching and Detaching Nut of Switch	Wrench	J-248	308032	BM35Y	94
	56	Disassembly of the Nut assembled in Gear Cover	Socket	J-267	309168	BM25, etc.	95
Circular Saw	57	Special Repair Tool for Fixing Bevel Plate on Base Ass'y	Rivet Caulking bar (A)	J-263	308483	C6U, C7U, C8U, C9U	97
			Rivet Caulking bar (B)	J-264	308484		

## APPENDIX

1. Supply List of Oil and Grease .....	98
2. Lubricant Quick Reference Sheet .....	100

## INDEX

Type	Page	Type	Page	Type	Page	Type	Page
J-10	16	J-126	90	J-168	15	J-231-3	11
J-30	3	J-127	7	J-171	63	J-237	64
J-41	7	J-127-2	7	J-173	93	J-240	65
J-42	7	J-127-3	7	J-178	41	J-241	65
J-43	7	J-127-4	7	J-179	41	J-242	65
J-44	7	J-127-5	7	J-180	41	J-243	65
J-70	86	J-127-6	7	J-186	54	J-244	39
J-78	17	J-127-7	7	J-187	76	J-245-1	25
J-82	87	J-127-8	7	J-188	77	J-245-2	25
J-87	81	J-127-9	7	J-189	41	J-245-3	25
J-88	81	J-128	32	J-190	41	J-248	94
J-89	85	J-129	33	J-193	41	J-249	67
J-90	17	J-129-2	33	J-194	41	J-251	69
J-94	13	J-130	1	J-196	41	J-252	26
J-95	10	J-130-2	1	J-197	22	J-253	68
J-96	37	J-131	2	J-198	22	J-263	97
J-98	17	J-131-2	2	J-199	45	J-264	97
J-100	43	J-132	9	J-200	57	J-265	26
J-103	43	J-132-2	9	J-201	58	J-267	95
J-104	88	J-134	18	J-205	6	J-269	92
J-106	20	J-136	12	J-206	6	J-271	74
J-109	46	J-137	51	J-207	6	J-272	74
J-110	46	J-138	51	J-210	59	J-292	28
J-113	78	J-139	51	J-211	59		
J-113	79	J-140	23	J-212	59		
J-116	47	J-141	49	J-213	59		
J-117	47	J-142	49	J-214	44		
J-118	17	J-143	49	J-215	44		
J-119	89	J-144	61	J-216	38		
J-120	48	J-145	53	J-220	55		
J-121	48	J-148	19	J-222	56		
J-122	47	J-162	24	J-225	70		
J-122	49	J-163	34	J-226	70		
J-122	51	J-164	35	J-227	70		
J-123	61	J-165	36	J-228	73		
J-124	60	J-166	30	J-231-1	11		
J-125	91	J-166	31	J-231-2	11		